

**Warranty
Registration:**
register online today for a
chance to win a FREE Tripp Lite
product—www.tripplite.com/warranty



Owner's Manual

NetController™ Rackmount USB & PS/2 KVM Switches

Models: B042-004, B042-008 and B042-016



Tested To Comply With FCC Standards



Tripp Lite World Headquarters
1111 W. 35th Street, Chicago, IL 60609 USA
(773) 869-1234 • www.tripplite.com

Note: Follow these instructions and operating procedures to ensure correct performance and to prevent damage to this unit or to its connected devices.
Copyright © 2008 Tripp Lite. All rights reserved. All trademarks are the property of their respective owners. The policy of Tripp Lite is one of continuous improvement.
Specifications are subject to change without notice.

Table of Contents

| | |
|--|-----------|
| Table of Contents | 2 |
| 1. Features | 3 |
| 1.1 General Features | 3 |
| 1.2 Package Contents | 3 |
| 1.3 Hardware/Software Support | 3 |
| 1.4 Cable Requirements | 3 |
| 1.5 External Views | 4 |
| 1.5.1 Front View | 4 |
| 1.5.2 Rear View | 4 |
| 2. Installation | 5 |
| 2.1 Mounting the NetController KVM Switch | 5 |
| 2.2 Connecting Your PCs and Peripherals to a Single NetController KVM Switch | 5 |
| 2.3 Daisy-Chaining B042-Series KVM Switches | 5 |
| 3. Operation | 6 |
| 3.1 Control Interfaces | 6 |
| 3.1.1 Front-Panel Buttons | 6 |
| 3.1.2 Keyboard Hotkeys | 6 |
| 3.1.3 On-Screen Display | 7 |
| 3.2 OSD Main Menu | 7 |
| 3.3 OSD Setup Menu | 8 |
| 3.3.1 Auto Logout | 8 |
| 3.3.2 OSD Timeout | 8 |
| 3.3.3 Auto Scan Period | 8 |
| 3.3.4 Title Bar | 8 |
| 3.3.5 Hotkey | 8 |
| 3.3.6 Setup Password | 8 |
| 3.3.7 Load Default | 9 |
| 3.3.8 Load Default All | 9 |
| 3.4 Status Menu | 9 |
| 4. Upgrade Firmware | 9 |
| 5. Technical Specifications | 11 |

List of Figures

| | | |
|-------------|-----------------------------|----|
| Figure 1-1 | B042-008 Front Panel | 4 |
| Figure 1-2 | B042-016 Front Panel | 4 |
| Figure 1-3 | B042-008 Rear Panel | 4 |
| Figure 1-4 | B042-016 Rear Panel | 4 |
| Figure 2 | Daisy-Chain Diagram | 5 |
| Figure 3-1 | OSD Main Menu | 7 |
| Figure 3-2 | OSD Main Menu | 8 |
| Figure 3-3 | Password Setup Prompts | 8 |
| Figure 3-4 | Firmware Upgrade Prompts | 9 |
| Figure 3-5 | Firmware Power Warning | 9 |
| Figure 3-6 | Firmware Select File Window | 9 |
| Figure 3-7 | Firmware Check KVM Window | 9 |
| Figure 3-8 | Firmware Comparison Window | 10 |
| Figure 3-9 | Firmware Upgrade Window | 10 |
| Figure 3-10 | Firmware CRC Error | 10 |

List of Tables

| | |
|----------------|---|
| Hotkey Summary | 6 |
|----------------|---|

1. Features

1.1 General Features

- Connect up to 128* computers by daisy-chaining up to 8 levels of B042-Series KVM Switches
- Allows for easy customization of ports by daisy-chaining any combination of B042-Series KVMs
- Standard 19" rackmount size
- OSD menu for intuitive operation and easy control
- USB and PS/2 keyboard and mouse support on both console and PC side
- Supports video resolution up to 2048 x 1536
- Password protection and auto-logout features
- Firmware upgradeable
- Robust metal case design ensures best EMI shielding and video quality
- Hot-swappable: disconnect and reconnect USB computers without rebooting

* Daisy-chain (8) B042-016 KVMs to connect to 128 computers.

1.2 Package Contents

- (1) B042-004, B042-008 or B042-016 KVM Switch
- (1) 8-in. Daisy-Chain Cable—HD15 (M) to HD15 (F)
- (1) Daisy-Chain Terminator—HD15 (M)
- (1) 4-ft. Firmware Upgrade Cable—HD15 (F) to DB9 (F)
- (1) Power Adapter (AC to DC 9V, 1A)
- (1) Rackmount Hardware Kit
- (1) Owner's Manual CD
- (1) Quick Start Guide

1.3 Hardware/Software Support

- Supports standard 5-button Microsoft®, Logitech® or comparable Mice
- Supports standard Microsoft, Logitech and comparable keyboards
- Supports a wide range of software platforms: Macintosh®, DOS, Windows 95/98/SE/NT/2000/ME/XP/Server2003/Vista, Unix®, Linux and BSD
- Supports video graphic dimensions up to 2048 x 1536 pixels
- Supports a monitor refresh rate of 75Hz depending on the resolution set

1.4 Cabling Requirements

- Tripp Lite P780-Series USB PS/2 KVM Cable Kit—HD15 (M) to HD15 (M), MiniDIN6 (M), USB A (M) and USB A (F) to MiniDIN6 (M) Adapter. Available in 6-ft., 10-ft. and 15-ft. lengths. Not included.
- Daisy-Chain Cable—HD15 (M) to HD15 (F). Included.
- Daisy-Chain Terminator*—HD15 (F). Included.
- Firmware Upgrade Cable—HD15 (F) to DB9 (M). Included.
- AC Adapter Power Cord. Included.



P780-Series USB PS/2 KVM
Cable Kit —*Not Included*



8-in Daisy-Chain Cable—*Included*



4-ft Firmware Upgrade Cable—*Included*



Daisy-Chain Terminator**—*Included*

* Required on the Daisy-Chain Out Port of the last KVM in a daisy-chain. Not required when using an individual B042-Series KVM Switch.

1. Features (continued)

1.5 External Views

1.5.1 Front View

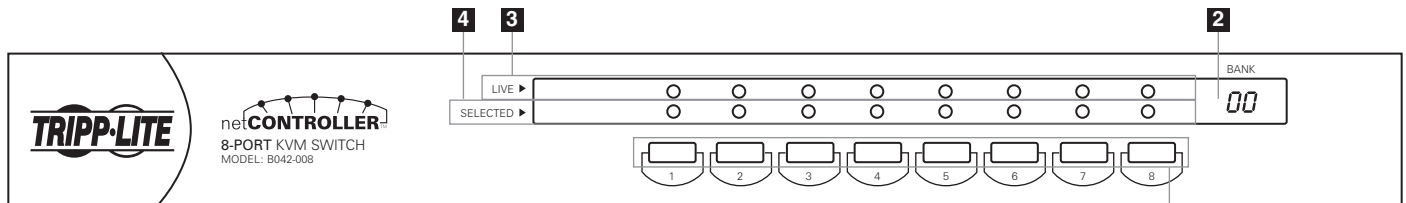


Figure 1-1: B042-008 Front Panel

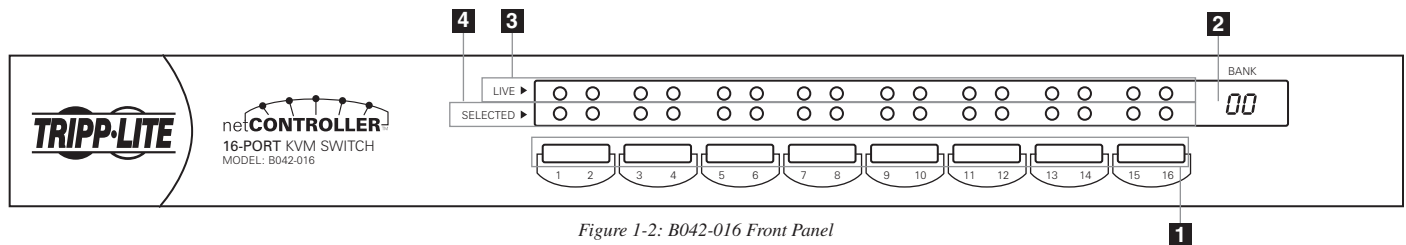


Figure 1-2: B042-016 Front Panel

Port-Switching Buttons

- 1** Use these buttons to switch directly to the desired port.

Numerical LED Displays and Indicators

- 2 Bank LED Display:** Shows the currently selected KVM in a daisy-chain. The LED will default to bank 1 if the KVM is not daisy-chained to other KVMs.
- 3 Red ‘Live’ LED Indicators:** A Red LED will be displayed above each port with a connected computer that is running power through the PS/2 or USB console interface. If the connected computer is powered off, the red LED will not be illuminated.
- 4 Green ‘Selected’ LED Indicators:** A Green LED will be displayed above the computer port which is currently selected as active.

1.5.2 Rear View

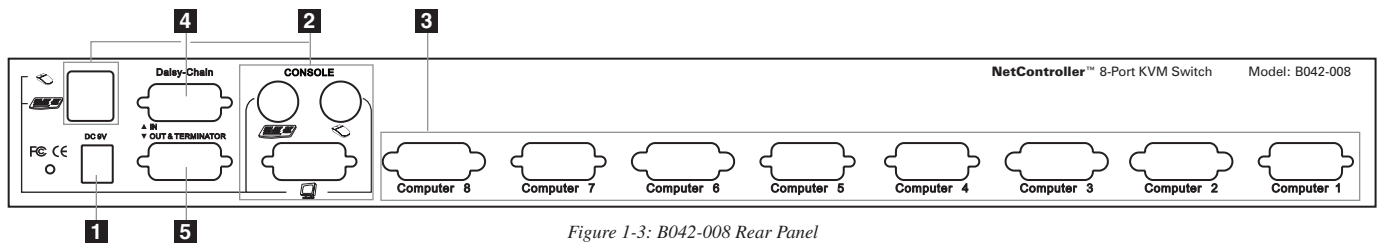


Figure 1-3: B042-008 Rear Panel

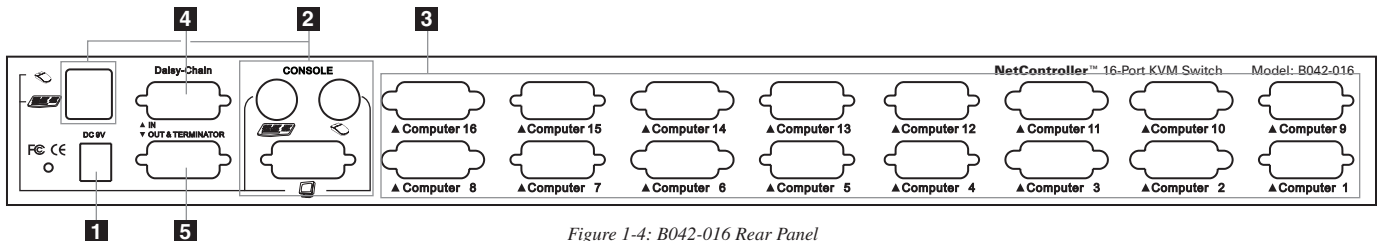


Figure 1-4: B042-016 Rear Panel

- 1 Power Receptacle:** The power receptacle should receive electricity from the included 9V DC 1A power adapter cord. Its center pin is of a positive polarity.
- 2 Console Ports:** The console ports provide keyboard and mouse connectors for both PS/2 and USB interfaces, as well as a HD15 (F) connector for the monitor/LCD display.
- 3 PC Port:** The PC port is a HD15 (F) connector integrated with USB and PS/2 keyboard, mouse and video. To connect a computer to the PC port, you will need one of Tripp Lite’s P780-Series USB PS/2 KVM Cable Kits. Not included.
- 4 Daisy-Chain IN Port:** The daisy-chain IN port is a HD15 (M) connector which provides daisy-chaining upstream to a B042-Series KVM Switch. The daisy-chain IN port is also used in the firmware upgrade process.
- 5 Daisy-Chain OUT Port:** The daisy-chain OUT port is a HD15 (F) connector which provides daisy-chaining downstream to a B042-Series KVM Switch.

2. Installation

2.1 Mounting the NetController KVM Switch

The KVM Switch can be placed on a desktop or mounted in a standard 19" rack.

2.2 Connecting Your PCs and Peripherals to a Single NetController KVM Switch

Step 1: Connect the console (shared USB or PS/2 keyboard, mouse and monitor) to the console connectors on the backside of the KVM Switch.

Note: For USB connection, separate keyboard and mouse connectors are required.

Step 2: Connect the included 9V DC power adapter cord to the KVM Switch to power it on.

Step 3: Connect each computer to the KVM Switch using a P780 Series Tripp Lite USB PS/2 KVM Cable Kit. Not included.

The KVM Switch is now ready to operate as soon as you turn on any of the attached computers.

Note: When you are connecting a PS/2 computer, it is required that the B042-004,-008 or -016 KVM Switch is connected and powered on before starting your computers. The reason is because when your PC is booting up, the PS/2 interfaces on the connected computer have to communicate with your keyboard and mouse and get a response from them. If your KVM switch has not been running and is connected to your computer, it might have difficulty recognizing the keyboard and mouse.

2.3 Daisy-Chaining B042-Series KVM Switches

To maximize the number of connected computers, multiple B042-004,-008 or -016 KVM Switches can be daisy-chained together to connect up to a total of 128 computers (with 8 units of the B042-016 KVM Switch). The B042-Series KVM Switches that are to be daisy-chained do not have to be of the same port capacity. You can daisy-chain any combination of B042-004,-008 or -016 KVM Switches to scale the port capacity with more flexibility. KVM controls can then be extended to groups of computers connected on the daisy-chain of B042-Series KVM Switches.

Daisy-chain Multiple KVM Switches

Step 1: Connect the console (shared USB or PS/2 keyboard, mouse and monitor) to the console port connectors on the rear panel of the master (first) B042-Series KVM Switch.

Step 2: Connect the power adapter cord to the DC 9V power receptacle on the master KVM Switch and plug it in to a power source.

Step 3: Use the provided daisy-chain cable—HD15 (M) to HD15 (F)—to connect the daisy-chain OUT port of the master KVM switch to the daisy-chain IN port of the second (downstream) B042-004,-008 or -016 KVM Switch. Then connect the power adapter cord to the DC 9V power receptacle on the second KVM Switch.

Step 4: Follow the same procedure for any additional KVM Switches you would like to attach, creating a daisy-chain up to 8 KVM Switches.


Step 5: After you have set up the Daisy-Chain of KVM Switches, plug the daisy-chain terminator into the daisy-chain OUT port of the last KVM Switch.*

Step 6: Connect each computer to the KVM Switches in your daisy-chain using a P780 series Tripp Lite USB PS/2 KVM Cable Kit. Not included.

Step 7: The KVM Switches are now ready to operate as soon as you turn on any of the attached computers.

Note: When you are connecting a PS/2 computer, it is required that the B042-004,-008 or -016 KVM Switch is connected and powered on before starting your computer. The reason for this is because when your computer is booting up, the PS/2 interfaces on the connected computer have to communicate with your keyboard and mouse and get a response from them. If your KVM switch has not been running and is connected to your computer, it might have difficulty recognizing the keyboard and mouse.

* It is not necessary to attach the daisy-chain terminator if you are not daisy-chaining the switch to another KVM.

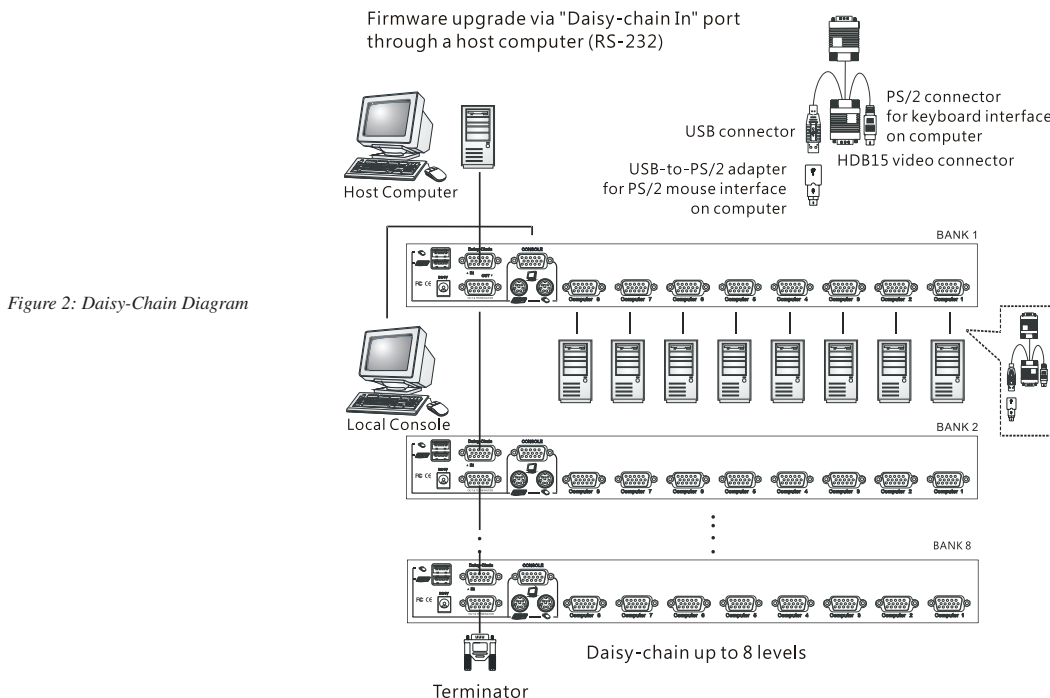

3. Operation

This chapter provides general guidelines for KVM Switch operation. It is strongly recommended that you read this chapter in advance of operating your B042-004, -008 or -016 KVM Switch.

3.1 Control Interfaces

There are three ways to operate your B042-004,-008 or -016 KVM Switch—Front-panel buttons, Keyboard Hotkeys or the OSD Menu. The operation of these three control methods is detailed below.

3.1.1 Front-Panel Buttons

The front-panel push buttons are used to directly select the active computer channel that can be controlled by the shared keyboard, mouse and monitor. Pressing a front-panel button during normal operation will cause the corresponding channel to be selected.

3.1.2 Keyboard Hotkeys

Hotkeys are a convenient and quick way to operate the KVM Switch. Most of the hotkey control commands are preceded by two consecutive Scroll Lock keystrokes, followed by a specific command key or key sequence:

Hotkey control command = ScrLk* + ScrLk + Command Key/Sequence**

* Each key in a Hotkey Command must be pressed within 2 seconds of the previous key to allow the command to take place.

** User-Definable hotkey via the OSD Setup Menu. You have the option of using ScrLk, Caps Lock, Num Lock (OSD will say 'Number' instead of 'Num Lock.') or F12.

In most cases, it will take at least three keystrokes to complete a command. In certain cases, commands may require up to 6 strokes (such as when selecting specific bank and port numbers for the active channel).

All the available hotkey commands and OSD Menu options are summarized in the following table for your convenience.

| Command | Hotkey Sequence ⁵ | OSD Control ¹ | Description |
|---|--|---|--|
| Select Computer | ScrLk ⁴ + ScrLk ⁴ + ab + yz (ab= 2-Digit Bank # yz= 2-Digit Channel #) ² | Highlight the desired computer and hit the Enter key | Activates a desired computer to be accessed via the console (Shared USB or PS/2 Keyboard, Mouse and Monitor) |
| Next Lower Channel | ScrLk ⁴ + ScrLk ⁴ + ↓ | — | Selects the next lower connected channel on the active KVM Switch |
| Next Higher Channel | ScrLk ⁴ + ScrLk ⁴ + ↑ | — | Selects the next higher connected channel on the active KVM Switch |
| Next Lower Bank | ScrLk ⁴ + ScrLk ⁴ + PgUp | Hit Page Up button when in OSD Main Menu | Select the next lower KVM Switch in a Daisy-Chain |
| Next Higher Bank | ScrLk ⁴ + ScrLk ⁴ + PgDn | Hit Page Down when in OSD Main Menu | Select the next higher KVM Switch in a Daisy-Chain |
| Beep On/Off | ScrLk ⁴ + ScrLk ⁴ + B | — | Turns the beep sound on/off when Auto Scanning and when hitting hotkeys |
| Auto Scan | ScrLk ⁴ + ScrLk ⁴ + S | — | Starts an Auto Scan of all the connected computers |
| Stop Autoscan | Any key | — | Stops an Auto Scan of all the connected computers |
| Title Bar On/Off | ScrLk ⁴ + ScrLk ⁴ + T | — | Turns the Title Bar On/Off. |
| Reset Console Mouse & Keyboard | ScrLk ⁴ + ScrLk ⁴ + End | — | Resets Console Mouse & Keyboard in the unlikely event of a lockup. |
| Show OSD Menu | ScrLk ⁴ + ScrLk ⁴ + (Space Bar) | — | Opens up the OSD Main Menu |
| Change Computer Name | — | Highlight the desired computer in the OSD Main Menu, hit Insert to change name | Changes the computer's name from the default (PC01, PC02, etc) to a user-defined name. 8 character limit |
| Load Default | — | In OSD Setup Menu select Load Default and hit the Enter Key | Restores all settings (Auto Logout, OSD Timeout, etc.) on all daisy-chained KVM switches to the default settings. Does not affect password |
| OSD Appearance | — | In OSD Setup Menu highlight OSD Appearance and use ↔ Keys to choose Yes/No | Specifies if you want to keep/hide the OSD Menu after a Port Switching Operation. |
| Auto Scan Period (00 – 95 seconds) | — | In OSD Setup Menu highlight Auto Scan Period and use the ↔ keys to choose time interval | Specifies a time interval for the Auto Scan to switch between computers. Auto Scan set to 10 seconds by default. 00= Disabled. |
| Auto Logout Timeout (00-99 minutes) | — | In OSD Setup Menu highlight Auto Logout and use the ↔ keys to choose time interval | Specifies the amount of time that must pass without keyboard activity before KVM logs off. This requires password to be entered to access KVM. Auto Logout is disabled by default: 00= Disabled. |
| OSD Menu Timeout (00-95 seconds) | — | In OSD Setup Menu highlight OSD Timeout and use the ↔ keys to choose time interval | Specifies the amount of time with no activity before the OSD Menu turns off. OSD Menu Timeout defaults at 30 seconds. |
| Title Bar Position | — | In OSD Setup Menu highlight Title Bar; use ↔ keys to choose Left, Right or Disable | Displays the Title Bar on the Left or Right side of the monitor screen or disables it. |
| Password³ | — | In OSD Setup Menu highlight Password and hit the Enter key. Follow steps to set password. | Enables/Disables the password for the B042-004, -008 or -016 KVM switch. User-definable password has an 8-character limit. |
| Define Hotkey Preceding Sequence | — | In OSD Setup Menu highlight the Hotkey Option; use ↔ keys to select desired Hotkey | Selects a Hotkey preceding sequence of Scroll Lock, Caps Lock, Num Lock or F12 |

1) a, b, y and z each denote a number key. (ab) = 01 – 08 (yz) = 01 – 16. When using an individual KVM switch, bank # will be 01

2) Each Hotkey must be pressed within 2 seconds of the preceding Hotkey for the command to take place.

3) Activate OSD menu, using ScrLk + ScrLk + (Space Bar). More detailed OSD Operation instructions are provided in this user's guide. When OSD Menu is active, mouse will be locked until the OSD Menu is off.

4) The password has an 8-character limit. If you forget your password and can't access your KVM, contact Tripp Lite Tech Support at (773) 869-1234

5) User-Definable Hotkey Preceding sequence. Choose between Scroll Lock, Caps Lock, Num Lock and F12

3. Operation

3.1.3 On-Screen Display

To activate the OSD Menu, use the hotkey sequence: ScrLk + ScrLk + (Space Bar)

OSD (On-Screen Display) is a menu that is superimposed on your screen. In the OSD Menu, you will see a listing of the available banks and channels for selection and the currently online status of each channel. You can use the OSD to control the KVM switch with more convenient and intuitive menu-driven operation. The OSD menu also allows you to rename your computer (up to 8 characters), which lets you find a computer by its name instead of port number. It also allows you to password-protect your KVM switch system.

Note: While OSD is activated, all the front-panel buttons and mouse activity will be made inactive.

3.2 OSD Main Menu

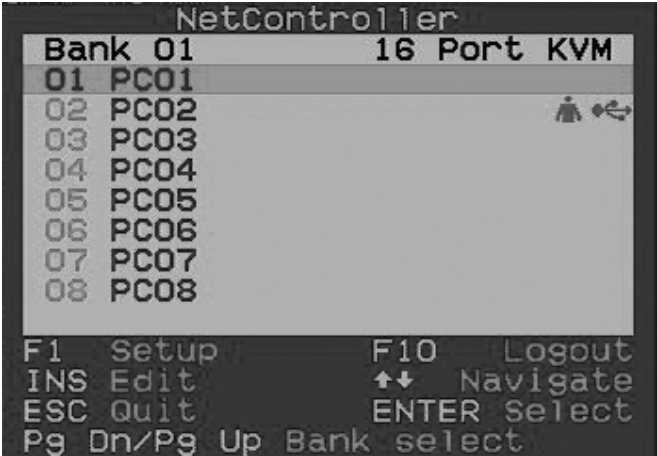





Figure 3-1: OSD Main Menu

- The computer name that is followed by a human symbol  means that it is currently the active channel you can monitor on your local console now.
- The computer name that is followed by a solar symbol  indicates that it is currently connected to the KVM Switch via PS/2 interface and feeding power to the KVM switch.
- The computer name that is followed by a USB symbol  indicates that it is connected to the KVM switch via USB interface and feeding power to the KVM switch.
- Computers that do not show any symbol are either not connected or are not powered on.
- The computer name that is illuminated by a background color indicates that it is currently in focus, and you can perform OSD operation on it using your keyboard.

Navigating through the Computers in the OSD Main Menu

Use the ↑↓ keys to highlight the desired computer. To access different KVMs in a Daisy-Chain, use the ‘Page Up’ and ‘Page Down’ keys to scroll to the desired KVM (Bank).

Selecting a Computer as the Active computer on your Console

Highlight the desired computer by using the ↑↓ keys and hit the ‘Enter’ key. To access different KVMs in a Daisy-Chain, use the ‘Page Up’ and ‘Page Down’ keys to scroll to the desired KVM (Bank).

Editing a Computer

To change the Computers name in the OSD, use the ↑↓ keys to highlight the desired computer and hit the ‘Insert’ key to edit. To access different KVMs in a Daisy-Chain, use the ‘Page Up’ and ‘Page Down’ keys to scroll to the desired KVM (Bank).

Exiting the OSD Menu

Hit the ‘Esc’ key

Logout from the KVM Switch

Hit the ‘F10’ key

3. Operation

3.3 OSD Setup Menu

Hit the F1 Key when inside the OSD Main Menu to access the OSD Setup Menu

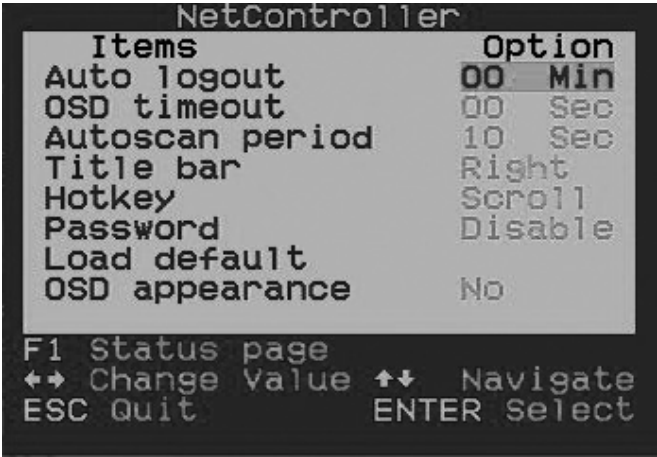


Figure 3-2: OSD Main Menu

3.3.1 Auto Logout

Specify time for Auto Logout. Use the $\uparrow\downarrow$ keys to navigate to the Auto Logout option in the OSD Setup Menu and use the $\leftarrow\rightarrow$ keys to change the time interval. Hit the 'Enter' key to confirm the change. The Auto Logout defaults to 00 minutes and can be increased/decreased by intervals of 1, between 1 and 99. Once logged out, you will need to enter your password to access the KVM switch.

3.3.2 OSD Timeout

Specify duration for OSD Menu to stay on screen with no keyboard activity. Use the $\uparrow\downarrow$ keys to navigate to the OSD Timeout option and use the $\leftarrow\rightarrow$ keys to change the time interval. Hit the 'Enter' key to confirm the change. The OSD Menu Timeout defaults at 30 seconds and can be increased/decreased by intervals of 5, between 00 and 95. 00 means the OSD Menu Timeout is disabled.

3.3.3. Auto Scan Period

Specify the time interval between computers during Auto Scan. Use the $\uparrow\downarrow$ keys to navigate to the Auto Scan Period option in the OSD Setup Menu and use the $\leftarrow\rightarrow$ keys to change the time interval. Hit the 'Enter' key to confirm the change. The Auto Scan period defaults to 10 seconds and can be increased/decreased by intervals of 5, between 5 and 95.

3.3.4 Title Bar

Determine the location of the Title Bar or disable it. The Title Bar specifies which computer you are using and defaults to the left side of your screen. You can select whether the OSD Title Bar will appear on the left or right side of the screen. Use the $\uparrow\downarrow$ keys to navigate to the OSD Title Bar option in the OSD Setup Menu and hit the 'Enter' key. Use the $\leftarrow\rightarrow$ keys to change where the Title Bar will appear.

3.3.5 Hotkey

Specify the Hotkey preceding sequence for all Hotkey commands. The Hotkey option allows you to choose among 4 keys to use as the initial hotkey. You can use Scroll Lock, Caps Lock, Num Lock (Num Lock will be described as Number) or F12. To change the Hotkey Preceding Sequence, go to the OSD Setup Menu, highlight Hotkey, select the desired hotkey using the $\leftarrow\rightarrow$ keys and hit the 'Enter' key to confirm the change.

3.3.6 Password

Specify password for access to the KVM switch. (Note: The Password option defaults to disabled.) Use the $\uparrow\downarrow$ keys to navigate to the Password option in the OSD Setup Menu and hit the 'Enter' key to select. Select to Enable or Disable Password Protection. Once enabled, you will be required to enter your password to access the KVM switch. Password defaults at 'admin.' To change the password configuration, you must provide the current password before making changes. If you forget your password and cannot access your KVM, contact Tripp Lite Tech Support at (773) 869-1234.



Figure 3-3: Password Setup Prompts

3. Operation

3.3.7 Load Default

Return all daisy-chained KVM switches to factory default settings (e.g., computer names, Auto Scan time, Auto Logout, etc.). This option will not change or disable password settings, ensuring the security of your KVM switch. Navigate to Load Default using ↑↓ keys and hit 'Enter'.


3.3.8 OSD Appearance

Keep or Hide the OSD Menu after switching ports.

3.4 Status Menu

Hit the F1 Key when inside the OSD Setup Menu to access the Status Menu.

The Status Menu shows the bank number, firmware version, model name and number of ports..

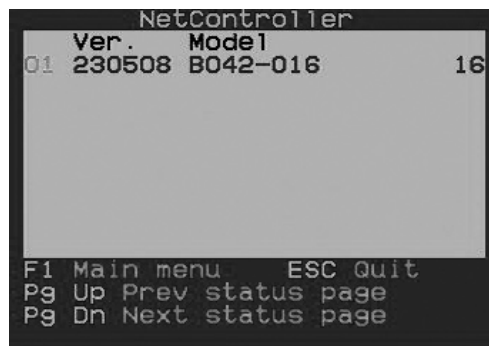

4. Upgrade Firmware

All firmware upgrades for the B042-004, -008 and -016 KVM Switches will be available in the Support Section of www.tripplite.com. (If there are no updates posted, there are none currently available.) Before downloading the firmware files, verify that the firmware version on the website is more current than that of your KVM switch. You can find your KVM switches firmware version by navigating to the Status Page in the OSD. You can also use the Firmware Upgrade Utility to check your firmware version. (See below) To perform a firmware upgrade on your B042-Series KVM Switch, follow these instructions.

Step 1: Using the provided Firmware Upgrade Cable, connect a standalone computer (one not already connected to the KVM Switches Server Port) to the KVM Switch. If you have multiple KVM Switches daisy-chained together, connect the Firmware Upgrade Cable to the Master KVM Switch (the first KVM in the daisy-chain). All KVM switches daisy-chained from the Master KVM switch will be upgraded simultaneously.

Step 2: Go to the Support section of www.tripplite.com and download the firmware upgrade utility and upgrade file.

Step 3: Before upgrading the firmware on your NetController KVM Switch, disable all running programs (anti-virus, system monitoring, etc.) on the standalone computer you are using to perform the upgrade. These programs may prevent the firmware upgrade from completing successfully.

Step 4: Locate the .exe file you just downloaded and double-click on it. The KVM Upgrade Utility screen will open.

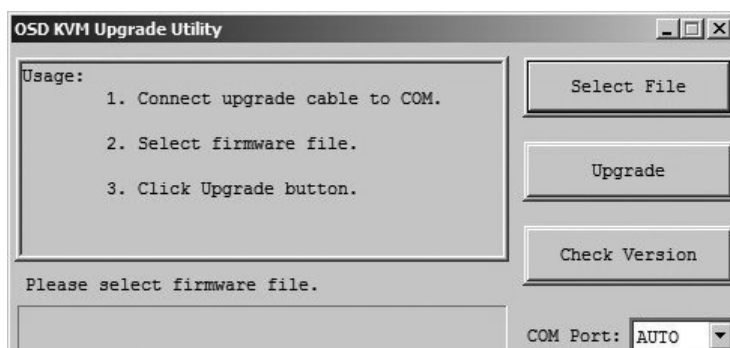


Figure 3-4: Firmware Select File Window

4. Upgrade Firmware

Step 5: Click the Select File button and find the firmware upgrade file that you just downloaded.

Step 6: If you have not yet verified your KVM Switches firmware version number via the OSD Status page, click the Check Version button. This will compare your KVM Switches firmware to the firmware upgrade file you just downloaded. If your KVM has more recent firmware, the Firmware Upgrade Utility will ask you if you wish to continue.

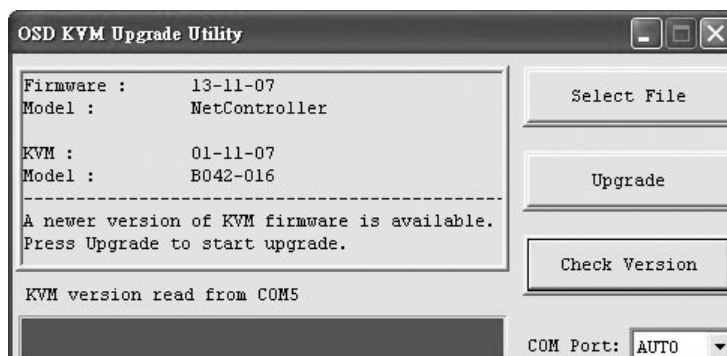


Figure 3-5: Firmware Comparison Window

If so, click the Upgrade button to start the upgrade. If not, close out of the Firmware Upgrade Utility. If your KVM Switch has older firmware than the downloaded file, click on the Upgrade button to start the upgrade. (Upon clicking the Upgrade button, you will be notified that the video, keyboard and mouse will be locked up during the upgrade process. Click yes to continue or no to exit.)

Step 7: During the firmware upgrade process, your KVM switch console will go blank and you will not be able to use the keyboard or mouse. Functionality will return upon firmware completion. The Firmware Upgrade Utility will notify you if the update was successful or not. If the upgrade fails, see the Troubleshooting section below.

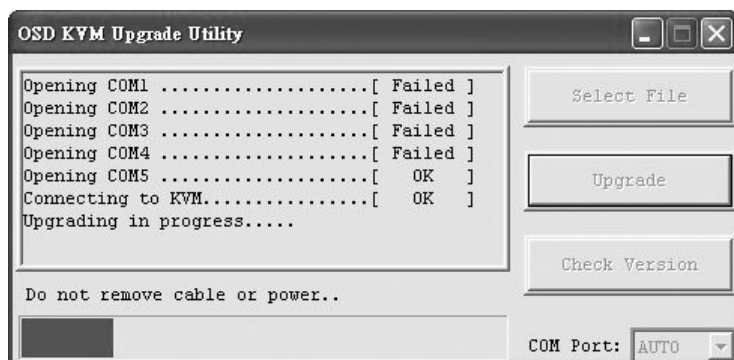


Figure 3-6: Firmware Upgrade Window

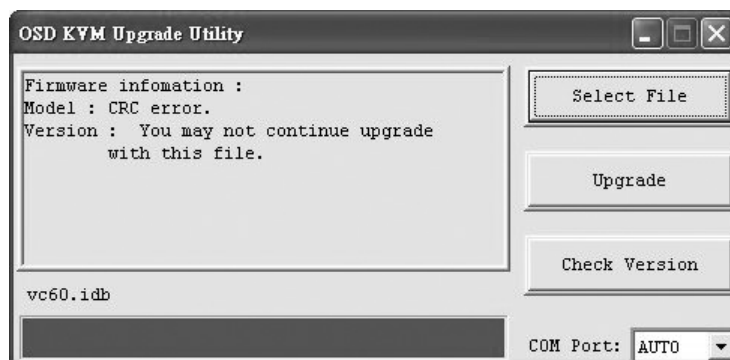


Figure 3-7: Firmware CRC Error

Firmware Upgrade Troubleshooting

If the firmware upgrade fails due to timeout, stalls at any point for a long period of time or fails due to power outage, check to make sure all running programs (anti-virus, system monitoring, etc.) are turned off. When you have determined all programs are disabled, unplug and re-plug the firmware upgrade cable and try the upgrade procedure again.

If you find that your keyboard and mouse are no longer working during a firmware upgrade failure, temporarily connect them to the host PC until you can finish the upgrade. Once completed, your KVM console should again be working properly.

If you find you have continued problems, please contact Tripp Lite Technical Support at (773) 869-1234 for assistance.

5. Technical Specifications

| | |
|--|---|
| PC Connections | 4 PC Ports (B042-004) 8 PC Ports (B042-008) 16 PC Ports (B042-016) |
| Console Connection | 1 console (USB or PS/2 Keyboard, Mouse and Monitor) |
| PC Port Connector (All female type) | HD15 (F)—integrated with USB and PS/2 Keyboard, Mouse and Video |
| Daisy-Chain Port Connectors | HD15 (M)—Daisy-Chain IN HD15 (F)—Daisy-Chain OUT |
| PC Selection | On-Screen Display (OSD) Menu, Hotkeys or Push Buttons |
| Numerical LED Display | (1) Bank Number Display |
| LED Indicators | 4 Green; 4 Red (B042-004) 8 Green; 8 Red (B042-008) 16 Green; 16 Red (B042-016) |
| On Screen Display (OSD) | Yes |
| Auto Scan Period | Programmable from 1-99 seconds |
| Keyboard Emulation | PS/2 and USB |
| Mouse Emulation | PS/2 and USB |
| VGA Resolution | 2048 x 1536 |
| Daisy-Chain Levels | 8 Levels |
| MAX PC Connection | 128; (8) B042-016 KVM Switches |
| Housing | Metal |
| Power Adapter | DC 9V 1A |
| Operation Temperature | 0 — 40°C |
| Storage Temperature | -20 — 60°C |
| Humidity | 0 — 90% RH, non-condensing |
| Size | 19" Rackmount |
| Weight | 4.2 lbs (B042-004) 4.4 lbs (B042-008) 4.9 lbs (B042-016) |
| Dimension (mm) | 16.1" x 6.5" x 1.8" (L x W x H) |
| Certifications | CE, FCC, RoHS |

1-Year Limited Warranty

TRIPP LITE warrants its products to be free from defects in materials and workmanship for a period of one (1) year from the date of initial purchase. TRIPP LITE's obligation under this warranty is limited to repairing or replacing (at its sole option) any such defective products. To obtain service under this warranty, you must obtain a Returned Material Authorization (RMA) number from TRIPP LITE or an authorized TRIPP LITE service center. Products must be returned to TRIPP LITE or an authorized TRIPP LITE service center with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase. This warranty does not apply to equipment, which has been damaged by accident, negligence or misapplication or has been altered or modified in any way.

EXCEPT AS PROVIDED HEREIN, TRIPP LITE MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL TRIPP LITE BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, TRIPP LITE is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise. Visit www.triplite.com/warranty today to register the warranty for your new Tripp Lite product. You'll be automatically

Warranty Registration

Visit www.triplite.com/warranty today to register the warranty for your new Tripp Lite product. You'll be automatically entered into a drawing for a chance to win a FREE Tripp Lite product!*

* No purchase necessary. Void where prohibited. Some restrictions apply. See website for details.

Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended. Do not use this equipment in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.

The policy of Tripp Lite is one of continuous improvement. Specifications are subject to change without notice.

Made in China



Tripp Lite World Headquarters
1111 W. 35th Street, Chicago, IL 60609 USA
(773) 869-1234 • www.triplite.com